

Notebook Essentials

For more information about HP products and services, see the HP Web site at <http://www.hp.com>.

© Copyright 2010 Hewlett-Packard Development Company, L.P.

Windows and Windows Vista are U.S. registered trademarks of Microsoft Corporation.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: 582228-001

User Guides

HP is committed to reducing the environmental impact of our products. As part of this effort, we provide user guides and learning centers on your computer hard drive in Help and Support. Additional support and updates to the user guides are available on the Web.

Windows Users



Looking for more user guides? They are on your computer. Click: **Start > Help and Support > User Guides**

Linux Users



Looking for more user guides? You can find them on the *User Guides* disc that came with your computer.

Subscription Services for Business Notebook



Keep this product up to date with the latest drivers, patches, and notifications. Sign up now at www.hp.com/go/alerts to receive e-mail alert notifications.

End User License Agreement (EULA)

BY INSTALLING, COPYING, DOWNLOADING, OR OTHERWISE USING ANY SOFTWARE PRODUCT PRE-INSTALLED ON THIS PC, YOU AGREE TO BE BOUND BY THE TERMS OF THE HP EULA. IF YOU DO NOT ACCEPT THESE LICENSE TERMS, YOUR SOLE REMEDY IS TO RETURN THE ENTIRE UNUSED PRODUCT (HARDWARE AND SOFTWARE) WITHIN 14 DAYS FOR A REFUND SUBJECT TO THE REFUND POLICY OF YOUR PLACE OF PURCHASE. For any further information or for requesting a full refund of the PC, please contact your local point of sale (the seller).


Contacting Customer Support

If the information provided in your User Guide or Learning Center does not address your questions, you can contact HP Customer Support at:

www.hp.com/go/contactHP

Here you can:

- Chat online with an HP technician.

 When technical support chat is not available in a particular language, it is available in English.
- E-mail HP Customer Support.
- Find HP Customer Support worldwide telephone numbers.
- Locate an HP service center.

Serial Number Label Information

The serial number label, located on the bottom of the computer, provides important information that you may need when contacting technical support.



1	Product name	4	Warranty period
2	Serial number	5	Model description (select models)
3	Product number		

Warranty Information

You may find the expressly provided HP Limited Warranty applicable to your product in the start menu on your PC and/or in the CD/DVD provided in the box. Some countries/regions may provide a printed HP Limited Warranty in the box. In countries/regions where the warranty is not provided in printed format, you may request a printed copy from www.hp.com/go/orderdocuments or write to:

North America:

Hewlett Packard, MS POD, 11311 Chinden Blvd, Boise, ID 83714, USA

Europe, Middle East, Africa:

Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy
Asia Pacific:

Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507

Please include your product number, warranty period (found on your serial number label), name and postal address.

Contents

Chapter 1: Getting started

Creating recovery discs	1
Connecting to the Internet	1
Updating your antivirus software	1
Getting to know the computer	2
Finding information	3
Locating the electronic manuals	3
Finding more information	4

Chapter 2: What's new?

Display rotating	5
Using the rotate button	6
TouchPad	7
Identifying TouchPad components	7
Turning the TouchPad on and off	8
Navigating	8
Selecting	9
Using TouchPad gestures	9
Touch screen	11
Using touch screen gestures	11
Setting touch screen preferences	14
Digitizer pen	15
Identifying the pen components	15
Holding the pen	15
Storing the pen	15
Sharing optical drives	16

Chapter 3: Networking

Choosing the type of Internet access	17
Using an ISP	18
Connecting to an existing wireless network	18
Setting up a wireless network	19
Step 1: Purchase high-speed Internet service	19
Step 2: Purchase and install a wireless router	20
Step 3: Configure the computer to connect to the wireless network	20
Connecting to a wired network	21

Chapter 4: Keeping the computer safe

Protecting the computer from viruses	23
Protecting your system files	23
Protecting your privacy	23
Protecting the computer from power surges	23
Turning off the computer	24
Using the computer safely	24

Chapter 5: Using software

Identifying installed software	25
Using HP TouchSmart software or HP MediaSmart software	26
Installing software from an optical disc	26
Creating or burning a CD or DVD	27
Updating the software installed on the computer	28

Chapter 6: Backup and recovery

Creating recovery discs	29
Backing up your information	30
When to back up	30
Backup suggestions	30
Using system restore points	30
Performing a recovery	31
Recovering using the recovery discs	32
Recovering using the partition on the hard drive (select models only)	32

Chapter 7: Routine care

Cleaning the display	33
Cleaning the TouchPad and keyboard	33
Traveling and shipping	34

Appendix A: Troubleshooting

Troubleshooting resources	35
Quick troubleshooting	35
The computer is unable to start up	35
The TouchPad is behaving erratically	35
The computer screen is blank	36
Software is functioning abnormally	36
The computer is on but is not responding	36
The computer is unusually warm	36
An external device is not working	37
The wireless network connection is not working	37

Appendix B: Specifications

Operating environment	39
Input power	40

Index

Chapter 1: Getting started

After you set up and register the computer, it is important to take the next steps in this guide before you begin using the computer. These steps include setting up your wired and wireless networking features. You will also find practical information to help you protect and maintain the computer. First, read this chapter completely, because it explains what to do and where to find additional information. Then, read specific chapters for additional information. For help in identifying specific components of the computer, refer to the user guide, which is located in Help and Support. Click **Start**, click **Help and Support**, and then click **User Guides**.

Creating recovery discs

After you set up your computer, one of the first and most important steps to take is to create a set of recovery discs of the full factory image. The recovery discs are essential in case of system instability or failure, when they are used to recover the operating system and software to factory settings. For instructions, refer to Chapter 6, “Backup and recovery.”

Connecting to the Internet

After creating the recovery discs, set up your wired or wireless network so that you can send and receive e-mail and connect to the Internet. For more information, refer to Chapter 3, “Networking.”

Updating your antivirus software


After you have connected to the Internet, be sure to update your antivirus software. The software is preinstalled on the computer and includes a limited subscription for free updates. Antivirus software helps protect your computer from damage caused by viruses. For more information, refer to Chapter 4, “Keeping the computer safe.”

Getting to know the computer

When you have completed the preceding steps, familiarize yourself with the features of the computer and set up any additional components, such as optional external audio devices.

Be sure to review the user guides located in Help and Support on the computer. They provide detailed information about using the computer. For instructions on accessing the user guides, refer to the “Finding information” section later in this chapter.


The following list highlights the entertainment features of the computer and explains where to get additional information for each feature.

- **Multimedia software**—The computer comes with preinstalled multimedia software, including HP MediaSmart, which turns the computer into a mobile entertainment center. For details, refer to Chapter 5, “Using software.”
- **Audio**—The computer includes integrated speakers. For more information on using the integrated speakers and setting up optional external audio devices, refer to the user guide in Help and Support.
- **Video**—You can connect an optional display device or an HDMI (High Definition Multimedia Interface) device to the computer. You can also use an optional external optical drive to watch a high-definition movie. For more information about the video features, refer to the user guide in Help and Support.
 -  On select models, when watching movies, you must use MediaSmart software.
- **Webcam**—Adjustable, with low-light image technology and built-in microphones, the webcam is a perfect companion to your instant messaging program. For more information on the webcam, refer to the user guide in Help and Support.

Finding information

Locating the electronic manuals

For detailed information about the features and components of the computer, such as power management, drives, memory, security, and other features, click **Start**, click **Help and Support**, and then click **User Guides**. You do not need to connect to the Internet to access the user guides in Help and Support.

 The desktop of your computer may look slightly different from the illustration in this section.



Help and Support



User Guides

Finding more information

In addition to the user guides, Help and Support also provides information about the operating system, drivers, troubleshooting tools, and accessing technical support. To access Help and Support, click **Start**, and then click **Help and Support**. For country- or region-specific support, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. To access this document, click **Start**, click **Help and Support**, and then click **User Guides**. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.

For more safety and regulatory information, and for battery disposal information, refer to the *Regulatory, Safety and Environmental Notices*. To access the notices, click **Start**, click **Help and Support**, and then click **User Guides**.

Chapter 2: What's new?

Display rotating

To rotate the display and use the computer in slate mode:

1. Open the display.
2. Rotate the display 180 degrees either clockwise or counterclockwise.



△ **CAUTION:** To reduce the risk of damage to your computer, do not force the display past 180 degrees.


3. Lower the display over the keyboard.



△ **CAUTION:** To reduce the risk of damage to your computer, do not transport the computer while it is in slate mode.

Using the rotate button


When the computer is in slate mode, press the rotate button (on the right side of the computer) to change the screen image to 4 different orientations. When you change the screen orientation, the top of the screen rotates 90 degrees clockwise into the following orientations: landscape secondary ❶, portrait primary ❷, landscape primary ❸, and portrait secondary ❹.

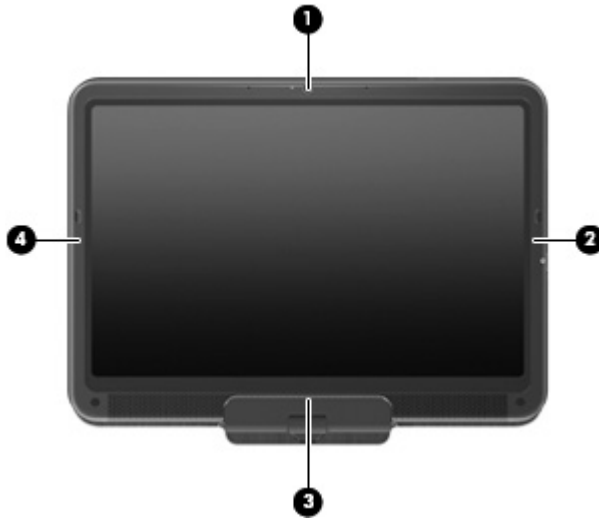


Computers with WWAN capabilities only support landscape primary ❸ and portrait secondary ❹ orientations.

TouchPad


Identifying TouchPad components

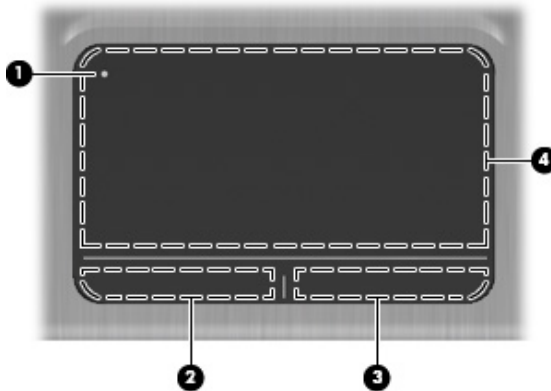

Component	Description
❶ TouchPad off indicator	To turn the TouchPad zone on and off, quickly double-tap the TouchPad off indicator.  When the TouchPad zone is active, the light is off.
❷ Left TouchPad button	Functions like the left button on an external mouse.
❸ Right TouchPad button	Functions like the right button on an external mouse.
❹ TouchPad zone	Moves the pointer and selects or activates items on the screen.


Turning the TouchPad on and off

The TouchPad is turned on at the factory. When the TouchPad zone is active, the light is off. To turn the TouchPad on and off, quickly double-tap the TouchPad off indicator.

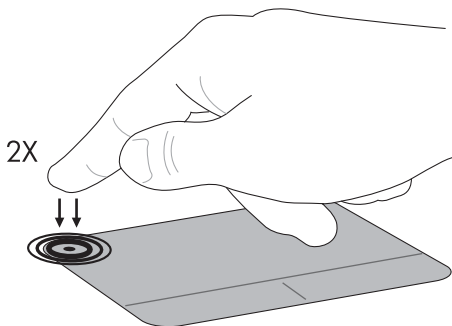


Navigating

To move the pointer, touch and slide one finger across the TouchPad surface in the direction you want the pointer to go.

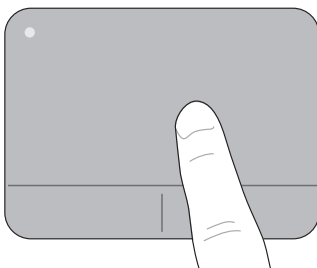


Selecting

Use the left and right TouchPad buttons like the corresponding buttons on an external mouse.

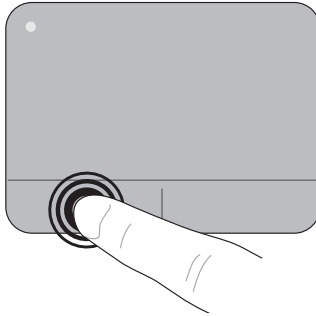


Using TouchPad gestures



The TouchPad supports a variety of gestures that make it easy and fun to work with images or pages of text. To activate the TouchPad gestures, place two fingers on the TouchPad at the same time as described in the following sections.

-
-  You can scroll and pinch anywhere on the TouchPad surface. The rotate gesture must be done within the TouchPad zone.
-

Scrolling

Scrolling is useful for moving around a page or image. To scroll, place two fingers slightly apart on the TouchPad, and then drag them across the TouchPad in an up, down, left, or right motion.


-
-  Scrolling speed is controlled by finger speed.
-

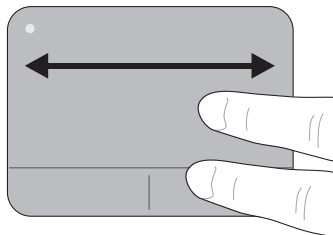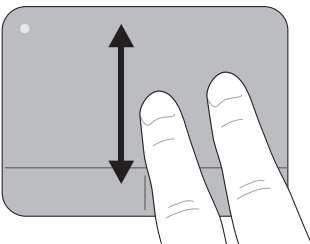

Pinching/Zooming


Pinching allows you to zoom in or out on images or text.


- Zoom in by placing two fingers together on the TouchPad, and then moving them apart to gradually increase the object's size.
- Zoom out by placing two fingers apart on the TouchPad, and then moving them together to gradually decrease the object's size.

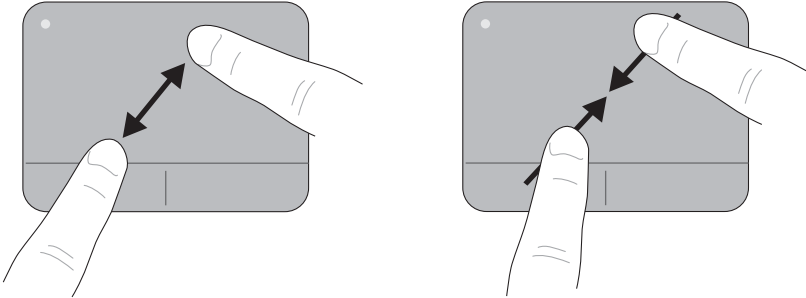

Rotating

Rotating allows you to rotate items such as photos and pages. To rotate, anchor your left forefinger in the TouchPad zone. Move the right forefinger around the anchored finger in a sweeping motion, moving from twelve o'clock to three o'clock. To reverse the rotation, move your right forefinger from three o'clock to twelve o'clock.

 Rotating must be done within the TouchPad zone.

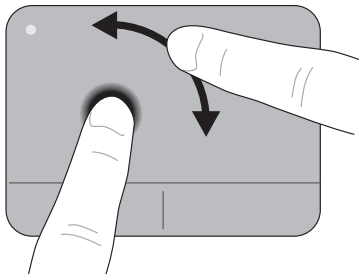


Setting TouchPad preferences

Scrolling, pinching, and rotating are enabled at the factory. Your computer also supports additional TouchPad gestures that are disabled at the factory.


To disable or reenable TouchPad gestures, or to explore other TouchPad gestures:


1. Double-click the **Synaptics** icon in the notification area, at the far right of the taskbar, and then click the **Device Settings** tab.
2. Select the device, and then click **Settings**.
3. Select the gesture that you want to disable or reenable.
4. Click **Apply**, and then click **OK**.

 For additional information about using the TouchPad, refer to the user guide. To access this guide, click **Start**, click **Help and Support**, and then click **User Guides**.

Touch screen

The computer allows you to use your fingers or the digitizer pen to perform certain actions on the touch screen.


 The instructions in this section are based on the preferences set at the factory. To modify settings for recognized clicks and flicks, click **Start**, click **Control Panel**, click **Hardware and Sound**, and then click **Pen and Touch**.

 Some gestures are not supported in all programs.

Using touch screen gestures


Tapping (or clicking)


Tap or double-tap an item on the screen as you would click or double-click with the TouchPad or an external mouse. Tap and hold an item to see the context menu as you would with the right TouchPad button.

 You must tap and hold your finger until the operating system draws a circle around the area you are touching, and then the context menu appears.

Flicking


Touch the screen in a light, quick flicking motion up, down, left, or right to navigate through screens or quickly scroll through documents.

 For the flick movement to work, a scrollbar must be present in the active window.

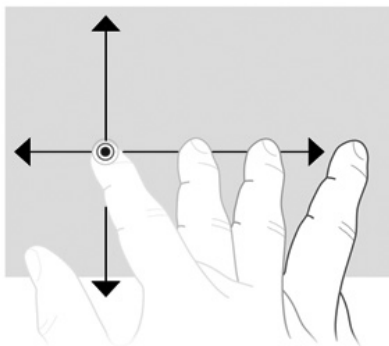


Dragging


Press your finger on an item on the screen, and then move your finger to drag the item to a new location. You can also use this motion to slowly scroll through documents.

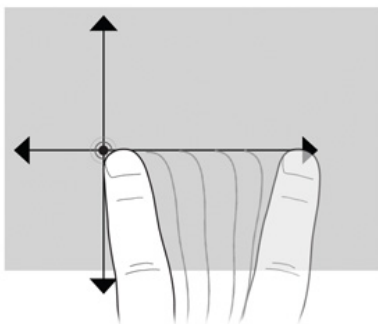

Scrolling


Scrolling is useful for moving up or down on a page or image. To scroll, place two fingers on the screen, and then drag them across the screen in an up, down, left, or right motion.

 Scrolling speed is controlled by finger speed.

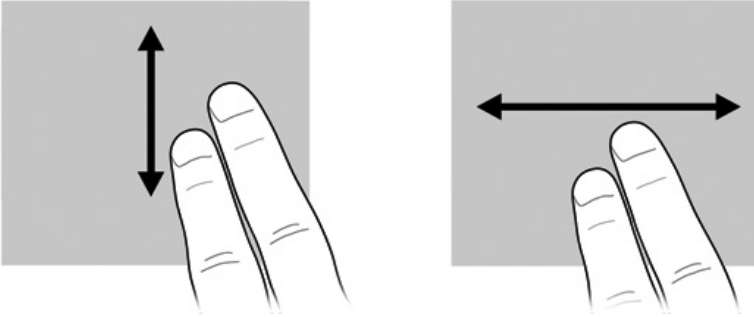

Rotating

Rotating allows you to rotate items such as photos and pages. To rotate, anchor your thumb on the screen, and then move your forefinger in a semicircular motion around your thumb.

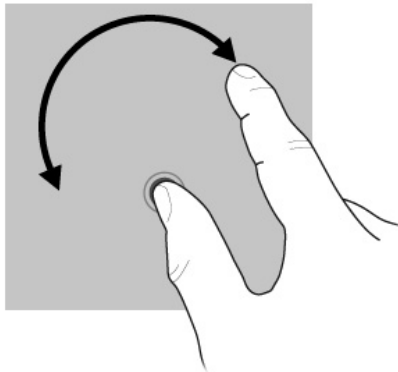


Pinching/Zooming

Pinching allows you to zoom in or out on items such as .pdf files, images, and photos.

To pinch:

- Zoom out by holding two fingers apart on the screen, and then pull the fingers together to decrease an object's size.
- Zoom in by holding two fingers together on the screen, and then pull the fingers apart to increase an object's size.

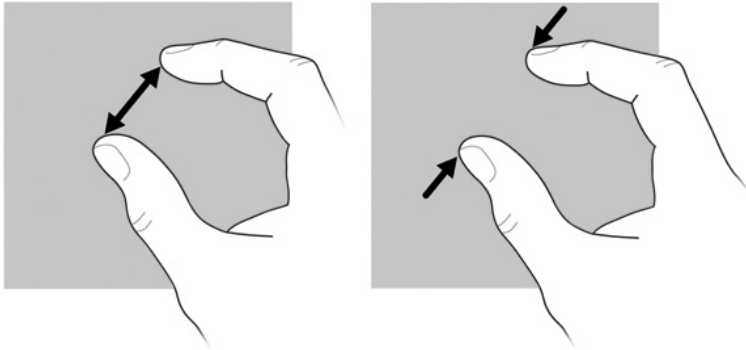

Setting touch screen preferences

- To set preferences for visual feedback, click **Start**, click **Control Panel**, click **Hardware and Sound**, and then click **Pen and Touch**. These preferences are specific to the touch screen and the computer.
- To set preferences for left-handed or right-handed users, click **Start**, click **Control Panel**, click **Hardware and Sound**, click **Tablet PC Settings**, and then click the **Other** tab. These preferences are specific to the touch screen and the computer.
- To set pointing device preferences such as pointer speed, click speed, and mouse trails, click **Start**, and then click **Devices and Printers**. Then, right-click the device representing your computer, and click **Mouse settings**. These preferences apply to any pointing device in the system.

To change or test click settings:

1. Click **Start**, click **Control Panel**, click **Hardware and Sound**, click **Pen and Touch**, and then click the **Pen Options** tab.
2. Under Pen Actions, select the action, and then click **Settings**.
3. After making any changes or testing the settings, click **OK**.

To change or create flick assignments:

1. Click **Start**, click **Control Panel**, click **Hardware and Sound**, click **Pen and Touch**, and then click the **Flicks** tab.
2. Click **Navigational flicks and editing flicks**, and then click **Customize**.
3. Follow the on-screen instructions to change or create a flick assignment.
4. Click **OK**.

Digitizer pen

You can write with the pen in pen-specific programs such as Tablet PC Input Panel, in all Microsoft® Office programs, and in most other Windows programs and utilities. The information you write on the screen with the pen can be filed, searched, and shared among most Windows programs.

Identifying the pen components

The pen interacts with the computer whenever the tip ❶ of the pen is pressed against the screen.

The pen tether eyelet ❷ allows you to connect a tether from the pen to the pen tether hole on the computer.



Holding the pen

Hold the pen as if you were writing with a standard pen or pencil.

Storing the pen

To store the pen when you are not using it, insert the pen, tip first, into the pen holder on the computer.



Sharing optical drives

Although your computer does not have an integrated optical drive, you can easily access software, install programs, and access information by sharing an optical drive connected to another computer in your network. Drive sharing is a feature of the Windows operating system that allows a drive on one computer to be accessible to other computers on the same network.



You must have a network set up in order to share an optical drive. Refer to Help and Support for information on setting up a network.



Some discs, such as DVD movies and game discs, may be copy-protected and therefore unusable through DVD or CD sharing.

To share an optical drive:

1. From the computer with the optical drive you want to share, click **Start**, and then click **Computer**.
2. Right-click the optical drive you want to share, and then click **Properties**.
3. Click the **Sharing** tab, and then click **Advanced Sharing**.
4. Select the **Share this folder** check box.
5. Type a name for the optical drive in the **Share name** text box.
6. Click **Apply**, and then click **OK**.
7. To view the shared optical drive on your computer, click **Start**, click **Control Panel**, click **Network and Internet**, and then click **Network and Sharing Center**.

Chapter 3: Networking



Internet hardware and software features vary depending on computer model and your location.

Choosing the type of Internet access

The computer supports two types of Internet access:

- **Wireless**—For mobile Internet access, you can use a wireless connection. To learn about adding the computer to an existing network or setting up a wireless network, refer to the “Connecting to an existing wireless network” section or the “Setting up a wireless network” section.
- **Wired**—You can access the Internet by connecting to a broadband network using the RJ-45 (network) jack.


The networking features of the computer enable you to access high-speed broadband Internet service providers with the following types of connections:

- Cable modem
- Digital Subscriber Line (DSL)
- Satellite
- Other services


Broadband access may require additional hardware or software provided by your Internet service provider (ISP).

Using an ISP

The following features will help you set up a new Internet account or configure the computer to use an existing account:

- **Choosing an ISP:** You must set up Internet service before you can connect to the Internet. Contact a local ISP to purchase Internet service and a modem. The ISP will help set up the modem, install a network cable to connect your wireless computer to the modem, and test the Internet service.
 -  Your ISP will give you a user ID and password to access the Internet. Record this information and store it in a safe place.
- **Internet Services & Offers (available in some locations):** This utility assists with signing up for a new Internet account and configuring the computer to use an existing account. To access this utility, click **Start**, click **All Programs**, click **Online Services**, and then click **Get Online**.
- **ISP-provided icons (available in some locations):** These icons may be displayed either individually on the Windows desktop or grouped in a desktop folder named Online Services. To set up a new Internet account or configure the computer to use an existing account, double-click an icon, and then follow the on-screen instructions.
- **Windows Connect to the Internet Wizard:** You can use the Windows Connect to the Internet Wizard to connect to the Internet in any of these situations:
 - ☐ You already have an account with an ISP.
 - ☐ You have a disc from an ISP.
 - ☐ You do not have an Internet account and want to select an ISP from the list provided within the wizard. (The list of ISP providers is not available in all regions.)
 - ☐ You have selected an unlisted ISP, and the ISP has provided you with information such as a specific IP address and POP3 and SMTP settings.

To access the Windows Connect to the Internet Wizard and instructions for using it, click **Start**, click **Help and Support**, and then type **Connect to the Internet wizard** in the Search box.

-  If you are prompted within the wizard to choose between enabling or disabling Windows Firewall, choose to enable the firewall.

Connecting to an existing wireless network

To connect the computer to an existing wireless network, follow these steps:

1. Click the network icon in the notification area, at the far right of the taskbar.
2. Select a network to connect to.
3. Click **Connect**.
4. If required, enter the security key.


Setting up a wireless network

This section describes the steps necessary to set up a typical home or small office wireless network, which is also called a wireless local area network (WLAN), using a wireless computer.

To set up a wireless network and to connect to the Internet, you need the following equipment:

- A broadband modem (either DSL or cable) and high-speed Internet service purchased from an Internet service provider (ISP)
- A wireless router (purchased separately)
- Your new wireless computer

The illustration shows an example of a completed wireless network installation that is connected to the Internet and to a wired computer. As this network grows, additional wireless and wired computers can be connected to the network to access the Internet.

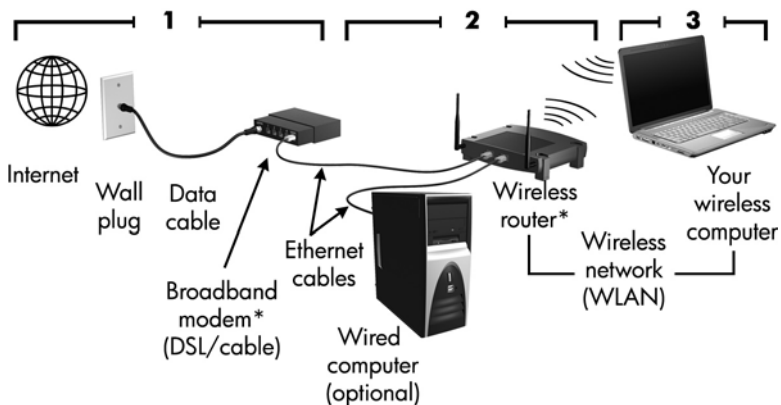

*Installation procedure varies based on manufacturer.


Step 1: Purchase high-speed Internet service

If you already have high-speed Internet service (DSL, cable, or satellite), begin with the “Step 2: Purchase and install a wireless router” section. If you do not have high-speed Internet service, follow these steps:


1. Contact a local ISP to purchase high-speed Internet service and a DSL or cable modem. The ISP will help set up the modem, install a network cable to connect your wireless computer to the modem, and test the Internet service.
2. Your ISP will give you a user ID and password to access the Internet. Record this information and store it in a safe place.

Step 2: Purchase and install a wireless router

Read this section carefully before you install the wireless router using the router manufacturer's instructions and your wireless computer. If you need technical assistance during the router installation, contact the router manufacturer.

 It is recommended that you temporarily connect your new wireless computer to the router by using the network cable provided with the router. This will ensure that the computer can access the Internet.

1. Turn off the wireless function. If the wireless light is white, press the wireless button to turn off the wireless function. For help locating the wireless button or light, refer to the user guide in Help and Support.
2. During the router installation, the router manufacturer's software allows you to change the network name (SSID) and enable security to protect the privacy of your wireless network. Many routers are shipped with a default network name and with security disabled. If you change the default network name or enable security during the router setup, record the information and store it in a safe place. You will need this information when you configure the computer and any other existing computers to access the router.

 If you do not enable security, an unauthorized wireless user can access the data on the computer and use your Internet connection without your knowledge. For more information on securing your wireless network, refer to the user guide in Help and Support.

The Windows operating system also provides tools to help you set up your wireless network for the first time. To use the Windows tools to set up your network, click **Start**, click **Network and Internet**, click **Network and Sharing Center**, click **Set up a new connection or network**, and then click **Set up a new network**. Then follow the on-screen instructions.

Step 3: Configure the computer to connect to the wireless network

1. If the computer is off, turn it on.
2. Turn on the wireless function. If the wireless light is amber, press the wireless button to turn on the wireless function. For help locating the wireless button or light, refer to the user guide in Help and Support.
3. Connect the computer to the wireless network:
 - a. Click the network icon in the notification area, at the far right of the taskbar.
 - b. Select a network to connect to.
 - c. Click **Connect**.
 - d. If required, enter the security key.
4. Test the wireless network by opening your Web browser and accessing a Web site.

Connecting to a wired network

Connecting to a wired network requires an RJ-45 network cable (purchased separately). If the cable contains noise suppression circuitry ❶, which prevents interference from TV and radio reception, orient the circuitry end of the cable ❷ toward the computer.



To connect the cable:



WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not plug a modem or telephone cable into the RJ-45 (network) jack.

1. Plug the cable into the jack ❶ on the computer.
2. Plug the other end of the cable into a wall jack ❷.



Chapter 4: Keeping the computer safe

Protecting the computer from viruses

When you use the computer for e-mail or Internet access, you expose it to computer viruses that can disable the operating system, programs, or utilities or cause them to function abnormally.

Antivirus software can detect most viruses, destroy them, and in most cases, repair damage they have caused. To provide ongoing protection against newly discovered viruses, antivirus software must be kept up to date.

Norton Internet Security is preinstalled on the computer:

- Your version of Norton Internet Security includes 60 days of free updates. It is strongly recommended that you protect the computer against new viruses beyond 60 days by purchasing extended update service.
- To access Norton Internet Security, or to get more information about it, click **Start**, click **All Programs**, and then click **Norton Internet Security**.

Protecting your system files

The operating system and the backup and recovery software provide several ways to back up the system and to recover optimal system functionality. For information, refer to Chapter 6, “Backup and recovery.”

Protecting your privacy

When you use the computer for e-mail, network, or Internet access, it is possible for unauthorized persons to obtain information about you or the computer.

To optimize the privacy protection features of the computer, follow these guidelines:

- Keep the operating system and software updated. Many software updates contain security enhancements.
- Use a firewall. Firewall software monitors incoming traffic on the computer to block messages that do not meet specific security criteria. Some firewalls also monitor outgoing traffic.

Protecting the computer from power surges

To protect the computer from the power surges that may be caused by an uncertain power supply or an electrical storm, observe these practices:

- Plug the computer power cord into an optional, high-quality surge protector. Surge protectors are available from most computer or electronics retailers.
- During an electrical storm, either run the computer on battery power or shut down the computer and unplug the power cord.

Turning off the computer

To turn off the computer:

1. Save your work and close all programs.
2. Click **Start**, and then click **Shut down**.

Using the computer safely



WARNING: To reduce the risk of electric shock or damage to your equipment, observe these practices:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the computer by unplugging the power cord from the AC outlet (not by unplugging the power cord from the computer).
- If provided with a 3-pin attachment plug on your power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.



WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. To access this document, click **Start**, click **Help and Support**, and then click **User Guides**. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.



WARNING: To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).



WARNING: To reduce potential safety issues, use only the AC adapter or battery provided with the computer, a replacement AC adapter or battery provided by HP, or a compatible AC adapter or battery purchased as an accessory from HP.

For more safety and regulatory information, and for battery disposal information, refer to the *Regulatory, Safety and Environmental Notices*. To access the notices, click **Start**, click **Help and Support**, and then click **User Guides**.

Chapter 5: Using software

The computer includes preinstalled software. Some models also include additional software on an optical disc.


You can use the software on the computer to perform these and many more tasks:


- Playing digital media, including audio and video CDs, audio and video DVDs, Blu-ray discs (BD), and Internet radio
- Creating or burning data CDs
- Creating, editing, and burning audio CDs
- Creating, editing, and burning a video or movie to a DVD or video CD


This chapter explains how to perform some of these tasks, and it also explains how to identify and update the software on the computer.

Identifying installed software

- » To see a list of the software that is preinstalled on the computer, click **Start**, and then click **All Programs**.

 Double-click the name of a program to open it.

 For details about using software included with the computer, refer to the software manufacturer's instructions, which may be provided with the software, on disc, or on the manufacturer's Web site.

 Windows 7® includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

Using HP TouchSmart software or HP MediaSmart software

Depending on your computer model, your computer has preinstalled HP TouchSmart or HP MediaSmart software. TouchSmart and MediaSmart turn your computer into a mobile entertainment center. You can enjoy music and DVD and BD movies. You can also manage and edit your photo collections.

TouchSmart and MediaSmart include the following features:

- Internet TV—View a range of TV shows and channels, as well as the HP-TV channel streamed in full-screen mode to computers with an Internet connection.
- Photo and video upload support, for example:
 - Upload your MediaSmart photos to Internet photo storage sites, such as Snapfish.
 - Upload your home videos (for example, fun videos created with the integrated webcam) directly to YouTube.
- Pandora Internet radio (North America only)—Listen to music selected just for you, streamed from the Internet.
- » To start TouchSmart or MediaSmart, double-tap the **TouchSmart** icon or the **MediaSmart** icon on the taskbar.

For information about using MediaSmart, click **Start**, click **Help and Support**, and then type **MediaSmart** in the Search box.

Installing software from an optical disc

To install any software from an optical disc, follow these steps:

1. Insert the disc into an optional external optical drive.
2. When the installation wizard opens, follow the on-screen instructions.
3. Restart the computer if you are prompted to do so.



For information about using software included with the computer, refer to the software manufacturer's instructions. These instructions may be provided with the software, on disc, or on the manufacturer's Web site.

Creating or burning a CD or DVD

If you have an optional external optical drive that supports CD-RW, DVD-RW, or DVD+RW discs, you can burn data, video, and audio files, including MP3 and WAV music files, using software such as Cyberlink Power2Go.

Observe the following guidelines when burning a CD or DVD:

- Before burning a disc, save and close any open files, and close all programs.
- A CD-RW or DVD-RW is generally best for burning data files or for testing audio or video recordings before you burn them to a CD or DVD that cannot be changed.
- A CD-R or DVD-R is usually best for burning audio files because after the information is copied, it cannot be changed.
- Because some home and car stereos will not play CD-RWs, use CD-R to burn music CDs.
- DVD players used in home systems usually do not support all DVD formats. Refer to the manufacturer's instructions that came with your DVD player for a list of supported formats.
- An MP3 file uses less space than most other music file formats, and the process for creating an MP3 disc is the same as the process for creating a data file. MP3 files can be played only on MP3 players or on computers with MP3 software installed.

To burn a CD or DVD, follow these steps:

1. Download or copy the source files into a folder on your hard drive.
2. Insert a blank CD or DVD into an optional external optical drive.
3. Click **Start**, click **All Programs**, and then click the name of the program you want to use.
4. Select the kind of CD or DVD you want to create—data, audio, or video.
5. Right-click **Start**, click **Explore**, and navigate to the folder where the source files are stored.
6. Open the folder, and then drag the files to the drive that contains the blank optical disc.
7. Initiate the burning process as directed by the program you have selected.



CAUTION: To prevent loss of information or damage to a disc, observe the following guidelines:

- Before writing to a disc, connect the computer to a reliable external power source. Do not write to a disc while the computer is running on battery power.
 - Before writing to a disc, close all open programs except the disc software you are using. Do not copy directly from a source disc to a destination disc or from a network drive to a destination disc. Instead, copy from a source disc or network drive to your hard drive, and then copy from your hard drive to the destination disc.
 - Do not use the computer keyboard or move the computer while the computer is writing to a disc. The write process is sensitive to vibration.
-



CAUTION: Observe the copyright warning. It is a criminal offense, under applicable copyright laws, to make unauthorized copies of copyright-protected material, including computer programs, films, broadcasts, and sound recordings. Do not use this computer for such purposes.

Updating the software installed on the computer

Most software, including the operating system, is updated frequently by the manufacturer or provider. Important updates to the software included with the computer may have been released since the computer left the factory.

Some updates may affect the way the computer responds to optional software or external devices. Many updates provide security enhancements.

Update the operating system and other software installed on the computer as soon as the computer is connected to the Internet. To access links for updating installed software, refer to Help and Support.

Chapter 6: Backup and recovery

Tools provided by the operating system and by HP Recovery Manager software are designed to help you with the following tasks for safeguarding your information and restoring it in case of a system failure:


- Backing up your information
- Creating a set of recovery discs
- Creating system restore points
- Recovering a program or driver
- Performing a full system recovery

Creating recovery discs


HP recommends that you create recovery discs to be sure that you can restore your system to its original factory state if you experience serious system failure or instability. Create these discs after setting up the computer for the first time.

Handle these discs carefully and keep them in a safe place. The software allows the creation of only one set of recovery discs.

Note the following guidelines before creating recovery discs:

- You will need an external optical drive (purchased separately).
- You will need high-quality DVD-R, double-layer DVD-R, DVD+R, double-layer DVD+R, or CD-R discs. All these discs are purchased separately. DVDs have a much higher capacity than CDs. If you use CDs, up to 20 discs may be required, whereas only a few DVDs are required.
 -  Read-write discs, such as CD-RW, DVD±RW, and double-layer DVD±RW, are not compatible with the Recovery Manager software.
- The computer must be connected to AC power during this process.
- Only one set of recovery discs can be created per computer.
- Number each disc before inserting it into the computer optical drive.
- If necessary, you can exit the program before you have finished creating the recovery discs. The next time you open Recovery Manager, you will be prompted to continue the disc creation process.


To create a set of recovery discs:

-
-  Be sure that an external optical drive is connected to the computer. An external optical drive must be connected to a USB port on the computer, not to a USB port on another external device, such as a hub or docking device.
-

1. Click **Start**, click **All Programs**, click **Recovery Manager**, and then click **Recovery Disc Creation**.
2. Follow the on-screen instructions.

Backing up your information

When to back up


- On a regularly scheduled basis
 -  Set reminders to back up your information periodically.
- Before the computer is repaired or restored
- Before you add or modify hardware or software

Backup suggestions

- Create a set of recovery discs using Recovery Manager.
- Create system restore points using the Windows System Restore feature, and periodically copy them to disc.
- Store personal files in the Documents library and back up this folder periodically.
- Back up templates stored in their associated programs.
- Save the customized settings in a window, toolbar, or menu bar by taking a screen shot of the settings. The screen shot can be a time-saver if you have to reset your preferences.
To copy the screen and paste the image into a word-processing document:
 - a. Display the screen.
 - b. Copy the screen:
 - To copy only the active window, press **alt+prt sc**.
 - To copy the entire screen, press **prt sc**.
 - c. Open a word-processing document, click **Edit**, and then click **Paste**.
 - d. Save the document.

Using system restore points


When you back up your system, you are creating a system restore point. A system restore point allows you to save and name a snapshot of your hard drive at a specific point in time. You can then recover back to that point if you want to reverse subsequent changes made to your system.

 Recovering to an earlier restore point does not affect data files saved or e-mails created since the last restore point.

You also can create additional restore points to provide increased protection for your system files and settings.

When to create restore points

- Before you add or extensively modify software or hardware
- Periodically, whenever the system is performing optimally

 If you revert to a restore point and then change your mind, you can reverse the restoration.

Create a system restore point


1. Click **Start**, click **Control Panel**, click **System and Security**, and then click **System**.
2. In the left pane, click **System protection**.
3. Click the **System Protection** tab.
4. Under **Protection Settings**, select the disk for which you want to create a restore point.
5. Click **Create**.
6. Follow the on-screen instructions.

Restore to a previous date and time


To revert to a restore point (created at a previous date and time), when the computer was functioning optimally, follow these steps:


1. Click **Start**, click **Control Panel**, click **System and Security**, and then click **System**.
2. In the left pane, click **System protection**.
3. Click the **System Protection** tab.
4. Click **System Restore**.
5. Follow the on-screen instructions.

Performing a recovery

 You can recover only files that you have previously backed up. HP recommends that you use Recovery Manager to create a set of recovery discs (an entire drive backup) as soon as you set up your computer.

Recovery Manager software allows you to repair or restore the system if you experience system failure or instability. Recovery Manager works from recovery discs that you create or from a dedicated recovery partition (select models only) on the hard drive. However, if your computer includes a solid-state drive (SSD), you may not have a recovery partition. If that is the case, recovery discs have been included with your computer. Use these discs to recover your operating system and software.

 Windows has its own built-in repair features, such as System Restore. If you have not already tried these features, try them before using Recovery Manager.

-
-  Recovery Manager recovers only the software that was preinstalled at the factory. Software not provided with this computer must be downloaded from the manufacturer's Web site or reinstalled from the disc provided by the manufacturer.
-


Recovering using the recovery discs

To restore the system from the recovery discs:

1. Back up all personal files.
2. Insert the first recovery disc into an optional external optical drive and restart the computer.
3. Follow the on-screen instructions.


Recovering using the partition on the hard drive (select models only)

On some models, you can perform a recovery from the partition on the hard drive by using either the **Start** button or **f11**. This restores the computer to its factory condition.

-
-  If your computer includes an SSD, you may not have a recovery partition. If the computer does not have a recovery partition, you will not be able to recover using this procedure. Recovery discs have been included for computers that do not have a partition. Use these discs to recover your operating system and software.
-


To restore the system from the partition, follow these steps:

1. Access Recovery Manager in either of the following ways:
 - ☐ Click **Start**, click **All Programs**, click **Recovery Manager**, and then click **Recovery Manager**.
 - or –
 - ☐ Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen. Then, press **f11** while the “Press <F11> for recovery” message is displayed on the screen.

 It may take several minutes for Recovery Manager to load.
2. Click **System Recovery** in the Recovery Manager window.
3. Follow the on-screen instructions.

Chapter 7: Routine care


Cleaning the display

 **CAUTION:** To prevent permanent damage to the computer, never spray water, cleaning fluids, or chemicals on the display.

To remove smudges and lint, frequently clean the display with a soft, damp, lint-free cloth. If the screen requires additional cleaning, use premoistened antistatic wipes or an antistatic screen cleaner.

Cleaning the TouchPad and keyboard

Dirt and grease on the TouchPad can cause the pointer to jump around on the screen. To avoid this, clean the TouchPad with a damp cloth, and wash your hands frequently when using the computer.

 **WARNING:** To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

Clean the keyboard regularly to prevent keys from sticking and to remove dust, lint, and particles that can become trapped beneath the keys. A can of compressed air with a straw extension can be used to blow air around and under the keys to loosen and remove debris.

Traveling and shipping


For best results, follow these traveling and shipping tips:

- Prepare the computer for traveling or shipping:
 1. Back up your information.
 2. Remove all optical discs and all external media cards, such as digital cards and ExpressCards.
 - △ To reduce the risk of damage to the computer, damage to a drive, or loss of information, remove the media from a drive before removing the drive from a drive bay, and before shipping, storing, or traveling with a drive.
 3. Turn off and then disconnect all external devices.
 4. Shut down the computer.
- Take along a backup of your information. Keep the backup separate from the computer.
- When traveling by air, carry the computer as hand luggage, and do not check it in with the rest of your bags.
 - △ Avoid exposing a drive to magnetic fields. Security devices with magnetic fields include airport walk-through devices and security wands. The airport security devices that check carry-on luggage, such as conveyor belts, use X-rays instead of magnetism and do not damage a drive.
- In-flight computer use is at the discretion of the airline. If you plan to use the computer during a flight, check with the airline in advance.
- If the computer will be unused and disconnected from external power for more than 2 weeks, remove the battery pack and store it separately.
- If you are shipping the computer or a drive, use suitable protective packaging and label the package “FRAGILE.”
- If the computer has a wireless device or a cell phone device installed, such as an 802.11b/g device, a Global System for Mobile Communications (GSM) device, or a General Packet Radio Service (GPRS) device, the use of these devices may be restricted in some environments. Such restrictions may apply onboard aircraft, in hospitals, near explosives, and in hazardous locations. If you are uncertain of the policy that applies to the use of a particular device, ask for authorization to use it before you turn it on.
- If you are traveling internationally, follow these suggestions:
 - Check the computer-related customs regulations for each country or region on your itinerary.
 - Check the power cord and adapter requirements for each location in which you plan to use the computer. Voltage, frequency, and plug configurations vary.
 - ⚠ To reduce the risk of electric shock, fire, or damage to the equipment, do not attempt to power the computer with a voltage converter kit sold for appliances.

Appendix A: Troubleshooting

Troubleshooting resources


If you experience computer problems, perform these troubleshooting steps in the order provided until the problem is resolved:

- Refer to “Quick troubleshooting,” the next section in this chapter.
- Access Web site links and additional information about the computer through Help and Support. Click **Start**, and then click **Help and Support**.
 -  Although many checkup and repair tools require an Internet connection, other tools, like Help and Support, can help you fix a problem when the computer is offline.

Quick troubleshooting

The computer is unable to start up


If the computer does not turn on when you slide the power switch, the following suggestions may help you resolve the problem:

- If the computer is plugged into an AC outlet, plug another electrical device into the outlet to be sure that the outlet is providing adequate power.
 -  Use only the AC adapter provided with the computer or one approved by HP for this computer.
- If the computer is running on battery power or is plugged into an external power source other than an AC outlet, plug the computer into an AC outlet using the AC adapter. Be sure that the power cord and AC adapter connections are secure.

The TouchPad is behaving erratically

If the TouchPad is behaving erratically, follow these guidelines:

- Be sure that the TouchPad is on. If the TouchPad off indicator is amber, quickly double-tap the TouchPad off indicator to turn on the TouchPad. If the TouchPad off indicator is off, the TouchPad is on.
- Follow these guidelines when using the TouchPad:
 - ☐ Use one finger to navigate, click, or turn on/turn off the TouchPad.
 - ☐ Use two fingers to control TouchPad gestures, such as scrolling and pinching/zooming.

 To turn the TouchPad gestures off or explore other TouchPad features, double-click the **Synaptics** icon in the notification area at the far right of the taskbar, click the **Device Settings** tab, and then click **Settings**.

The computer screen is blank

If the screen is blank, but the computer is on and the power light is on, the computer may not be set to display the image on the computer screen. To transfer the image to the computer screen, press the **switch image** key.

Software is functioning abnormally

If the software is unresponsive or responds abnormally, follow these suggestions:

- Restart the computer by clicking **Start**, clicking the arrow next to Shut down, and then clicking **Restart**.

If you cannot restart the computer using this procedure, refer to the next section, “The computer is on but is not responding.”

- Run a virus scan. For information about using the antivirus resources on the computer, refer to the “Protecting the computer from viruses” section in Chapter 4.

The computer is on but is not responding

If the computer is on but is not responding to software or keyboard commands, try the following emergency shutdown procedures, in the sequence provided, until shutdown occurs:



CAUTION: Emergency shutdown procedures result in the loss of unsaved information.

- Slide and hold the power switch for at least 5 seconds.
- Disconnect the computer from external power and remove the battery.

The computer is unusually warm

It is normal for the computer to feel warm to the touch while it is in use. But if the computer feels *unusually* warm, it may be overheating because a vent is blocked.

If you suspect that the computer is overheating, allow the computer to cool to room temperature. Then be sure to keep all vents free from obstructions while you are using the computer.



WARNING: To reduce the possibility of heat-related injuries or of the computer overheating, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).



The fan in the computer starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during operation.

An external device is not working

Follow these suggestions if an external device does not function as expected:

- Turn on the device according to the manufacturer's instructions.
- Be sure that all device connections are secure.
- Be sure that the device is receiving electrical power.
- Be sure that the device, especially if it is older, is compatible with the operating system.
- Be sure that the correct drivers are installed and updated.
- Be sure that an external optical drive is connected to a USB port on the computer, not to a USB port on another external device, such as a hub or docking device.

The wireless network connection is not working

If a wireless network connection is not working as expected, follow these suggestions:



If you are connecting to a corporate network, contact the IT administrator.

- Click **Start**, click **Network and Internet**, click **Network and Sharing Center**, click **Troubleshoot problems**, click **Internet Connections**, and then follow the on-screen instructions.
- Be sure that the wireless device is turned on and the wireless light on the computer is white. If the light is amber, turn on the wireless device.
- Be sure that the computer wireless antennas are free from obstructions.
- Be sure that the cable or DSL modem and its power cord are properly connected, and that the lights are on.
- Be sure that the wireless router or access point is properly connected to its power adapter and the cable or DSL modem, and that the lights are on.
- Disconnect and then reconnect all cables, and turn the power off and then back on.



For more information on wireless technology, refer to the information and the Web site links in Help and Support.



For information on activating broadband wireless service, refer to the mobile network operator information included with the computer.

Appendix B: Specifications

Operating environment

The operating environment information in the following table may be helpful if you plan to use or transport the computer in extreme environments.



Factor	Metric	U.S.
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

Input power

The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer is capable of accepting DC power within the following specifications.

Input power	Rating
Operating voltage	18.5 V dc
Operating current	3.5 A
 This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.	
 The computer operating voltage and current can be found on the system regulatory label on the bottom of the computer.	

Index

A

AC adapter 24
altitude specifications 39
antivirus software 23

B

backup 30
blank screen, troubleshooting 36

C

cable, modem 17
cleaning the display 33
cleaning the keyboard 33
clicking, touch screen 11
computer viruses 23
computer, turning on 35
connect to a wired network 21
connect to an existing wireless network 18
connecting to the Internet 18
creating a CD or DVD 27

D

devices, external, troubleshooting 37
digitizer pen
 holding 15
 identifying 15
 storing 15
display
 cleaning 33
 rotating 5
dragging, touch screen 12

E

electric shock 24
environmental specifications 39
external devices, troubleshooting 37

F

firewalls 23
flicking, touch screen 12

H

humidity specifications 39

I

identifying software 25
IEC 60950 compliance 24, 36

input power specifications 40

Internet

 choosing an ISP 18
 choosing type of access 17
 wireless access 17
Internet service provider (ISP) 18

K

keyboard, cleaning 33

M

MediaSmart, using 26

N

Norton Internet Security 23

O

operating environment specifications 39
optical drive, sharing 16
overheating, computer 36

P

pen

 holding 15
 identifying 15
 storing 15

pinching

 touch screen 14
 TouchPad 10

posture 24

power cord 24

power specifications 40

power surges 23

power, turning on computer 35

privacy, protecting 23

R

recovery discs 29

recovery, system 29

regulatory information notices 24

*Regulatory, Safety and
Environmental Notices* 24

restore points 30

rotating

 touch screen 13
 TouchPad 10

S

- safe computing practices 24
- Safety & Comfort Guide* 24
- scrolling
 - touch screen 13
 - TouchPad 9
- shipping the computer 34
- software
 - antivirus 23
 - identifying 25
 - safeguarding information 29
 - troubleshooting 36
 - updating 28
- specifications
 - altitude 39
 - humidity 39
 - input power 40
 - operating environment 39
 - temperature 39
- startup problems, troubleshooting 35
- surge protection 23
- system recovery 29
- system restore points 30

T

- tapping, touch screen 11
- temperature
 - safety considerations 24, 36
 - specifications 39
 - troubleshooting 36
- touch screen
 - dragging 12
 - flicking 12
 - pinching 14
 - rotating 13
 - scrolling 13
 - setting preferences 14
 - tapping 11
 - using 11
 - zooming 14
- TouchPad
 - cleaning 33
 - identifying 7
 - navigating 8
 - selecting 9
 - troubleshooting 35
 - turning on and off 8
- TouchPad buttons, identifying 7

TouchPad gestures

- pinching 10
- rotating 10
- scrolling 9
- using 9
- TouchPad off indicator, identifying 7
- TouchPad preferences, setting 11
- TouchPad zone, identifying 7
- traveling with the computer 34, 39
- troubleshooting 35
 - blank screen 36
 - display problems 36
 - external device problems 37
 - overheating problems 36
 - resources 35
 - software problems 36
 - startup problems 35
 - TouchPad 35
 - unresponsive computer 36
 - virus problems 36
 - wireless network problems 37

U

- unresponsive computer, troubleshooting 36

V

- vents, precautions 24, 36
- viruses 23

W

- wired network connection 21
- wireless Internet access 17
- wireless network connection 18
- wireless network problems, troubleshooting 37
- work habits 24
- workstation setup 24

Z

- zooming
 - touch screen 14
 - TouchPad 10